

























Quick User Guide

Thank you for choosing the Agility 3 Wireless Security System. This quick start guide describes the main user operating actions of the Agility 3. To view the full version of the user manual, please refer to our website www.riscogroup.com.















 




 



 

Away (Full) Setting:

 <p>Quick mode: Press </p> <p>High security mode: Press  + code or proximity tag.</p>	 <p>Quick mode: Press </p> <p>High security mode: Press  + code.</p>
 <p>Keyfob: Press  button.</p>	 <p>Send SMS: Enter [Code][A], (example, 1234A).</p>
 <p>Web Application: Click Full Set.</p>	 <p>Smartphone : Press </p>

Part (Home) Setting:

 <p>Quick mode: Press </p> <p>High security mode: Press  + code or proximity tag.</p>	 <p>Quick mode: Press </p> <p>High security mode: Press  + code.</p>
 <p>Keyfob: Press  button or button 4 (if engineer defined).</p>	 <p>Send SMS: Enter [Code][H], (example, 1234H).</p>
 <p>Web Application: Click Part Set.</p>	 <p>Smartphone: Press </p>

Partition Setting:

 <p>Quick mode: Press  /  /  >  / </p> <p>High security mode: Press  /  /  >  /  + code or proximity tag.</p>	 <p>Quick mode: Press  /  /  >  / </p> <p>High security mode: Press  /  /  >  /  + code.</p>
 <p>Press  button or button 4 (if engineer defined).</p>	 <p>Send SMS: Enter [Code] [A or H] [Partition 1,2 or 3].</p>

View Last Alarm:

Hold button  for two seconds.

View System Status:

Short/long press on  : LCD display.

System Unsetting:



Press followed by code or proximity tag.



Quick mode: Press .

High security mode:

Press > Code.



Press the button.



Send SMS: Enter [Code][D]
(example 1234D).



Web Application:
Enter user code and click **Unset**.



Smartphone:

Press .

Partition Unsetting:



Press / / > > code or proximity tag.



Quick mode:

Press / / > .

High security mode:

Press / / > > code.



Press the button. All partitions assigned to the button will be unset.



Send SMS: Enter [Code][D]
[Partition 1,2 or 3]
(example 1234D1).

Duress Unsetting:

Press followed by duress code.

Quick Zones Omit

Press > [Code] [Zone No.] [Define] .

Panic Alarm:



Press both and keys simultaneously.



Press both and keys simultaneously.



Press the small blank button (if engineer defined).

Fire Alarm:

Press simultaneously for 2 seconds.

Emergency/Medical Alarm:

Press simultaneously for 2 seconds.

Define Follow-Me:

Press > [Code] [Follow Me] [Define] .

System Chime On/Off:

Press the button for 2 seconds.

Output Control

Press button / / for 2 seconds.

LED Indicators:

 **Power LED (Green)**

On: Power OK.


Rapid Flash: AC trouble.

Slow Flash: Low battery trouble.

 **Trouble LED (Orange)**

Rapid Flash: Trouble.

Off: No trouble.

 **Set/Alarm LED (Red)**

On: System set.

Rapid Flash: Alarm.

Slow Flash: System in Exit Delay.

 **Part LED (Red)**

On: System set at PART.

Off: System unset.

Ready LED (Green)

On: System ready.

Off: Open zones.

Slow Flash: Ready to set with open entry/exit zone.

Sound Indicators:

Intrusion alarm: Continues rapid beeping.

Fire alarm: Staggered rapid beeping.

Exit delay: Slow buzzer beeps until the Exit Delay time period expires.






Entry delay: Slow buzzer beeps until the Entry Delay time period expires.

Confirm operation: A one-second tone.




Reject operation: Three rapid error beeps.

Set/Unset squawk: 1 sounder chirp: System set,
2 sounder chirps: System is unset,
4 sounder chirps: System unset after an alarm.

Edit User Codes:

1. Press  and enter your code.
 2. Scroll to the option Codes/Tags and press .
 3. Scroll to User Codes/Tags and press .
 4. Select the option New/Change and press .
 5. Scroll to select the User Index number to which you want to assign a user code and press.
 6. Enter and re-enter the new code followed by .
 7. Repeat the above steps for additional codes.
-

Assign Proximity Tag:

1. Follow steps 1-3 of the Edit User Code above.
 2. Scroll to Proximity Tags and press .
 3. Select the option New/Change and press .
 4. Scroll to the User Index number to which you want to assign a tag and press .
 5. Within 10 seconds, hold the proximity tag at a distance of 1 to 2 cm from the keypad's keys.
 6. Repeat the above steps for additional codes.
-

SMS Control Commands (not available during Cloud mode)

Full Set: [Code][A] (example 1234A)	Un-omit Zone: [Code][UB][Zone No.]
Home Set: [Code][H] (example 1234H)	Activate Output: [Code][UOON][UO No]
Full Unset: [Code][D] (example 1234D)	Deactivate Output: [Code][UOOFF][UO No]
Partition Set: [Code][A][Partition No.]	Get system status: [Code][ST]
Partition Unset: [Code][D][Partition No.]	Get last alarm memory: [Code][AL]
Omit Zone: [Code][B][Zone No.]	Get SIM credit level: [Code][CR]

Telephone Control Commands (not available during Cloud mode)

Receiving a call:	Acknowledgment menu:
1. Pick up the phone.	Acknowledge message: Press [1].
2. Say "Hello" or press [#]. You will hear an event announcement message.	Acknowledge and stop all dialing: Press [2] [User code] [#].
3. Acknowledge the event (See Acknowledgment menu).	Access Operations menu: Press [3] [User code] [#].
	Listen and Talk: Press [6] [User code].
	Repeat the event message: Press [#].
	Repeat the Acknowledgment menu: Press [*].

Register to RISCO Cloud

Registering to RISCO Cloud enables you to monitor, control and configure your Agility 3 system from any location.

1. Go to www.riscocloud.com/register.
2. Fill in your first name and last name.
3. Enter your email address as Login Name (required for 1st time activation).
4. Define password (minimum of 6 characters and at least one digit) and confirm.
5. Enter in the 15 digits Panel ID as it appear on the sticker located on the side of the panel or as printed on the postcard that arrived with the panel.
6. Complete registration form and press the Register Button.
7. To complete registration open the email message received on the email account you defined as Login Name.

Login to RISCO Cloud

1. Go to www.riscocloud.com.
 2. Enter User Name and Password (same as supplied during the registration process).
 3. Enter Passcode (Agility User Code).
 4. Click the Enter button.
-

iRISCO – RISCO's Smartphone Application

Homeowners can now enjoy the iRISCO Smartphone app for smart and easy control of their Agility 3 system from any location:

Download the iRISCO app from the Apple App store or Android Play Store.